

Ordering Information

| | | | | | | | |
|---|---|--------------------------|-------------------|----------------|--------------------------|----------------------------|---|
| Z T X 0 0 0 | | 0 | | | Z E C | Z V C | M 0 6 0 |
| MODEL/TYPE | CONTROL PANEL | APPLICATION | AMPERE SIZE | SWITCHED POLES | ENCLOSURE TYPE | OPERATIONAL VOLTAGE | ACCESSORIES |
| Z T X 0 0 0 Standard (Open Transition) | M 6 MX60 Microprocessor Control Unit | 0 Utility - Generator | 0 0 4 40 amps | B 2 Poles | 0 1 Type 1 Enclosed | A B Consult Table Below | A3/A4 Auxiliary Contacts (1 each) Closed in Source 1 (normal) and Source 2 (emergency) |
| | 0 0 No Microprocessor Control Unit | | 0 0 8 80 amps | E 3 Poles | 3 R Type 3R Enclosure | | B9X Battery Charger 1.5 Amp / 12 or 24 VDC |
| | | | 0 1 0 100 amps | F 4 Poles | 0 0 Open Style Unit | | |
| | | | 0 1 5 150 amps | | | | |
| | | | 0 2 0 200 amps | | | | |
| | | | 0 2 2 225 amps | | | | |
| | | | 0 3 0 300 amps | | | | |
| | | | 0 4 0 400 amps | | | | |

Then choose additional accessories

For information on ZTX OEM plans, please consult your GE representative

Example

ZTX000M60010E-ZEC01ZVC50M060

This number string shows the correct format for a ZTX Model Automatic Transfer Switch with MX60 microprocessor control unit, Utility - Generator, 100 amps, 3 pole, NEMA Type 1 enclosure, 480V 3 ϕ , 3 wire, 60 Hz system with the standard group of accessories.

Technical Specifications

| Lug Configuration | |
|-------------------|----------------------------|
| Amp Size | Standard Lugs |
| 40-150 | 1 - #8 to 3/0 per pole |
| 200-225 | 1 - #6 to 250 MCM per pole |
| 300-400 | 1 - #4 to 600 MCM per pole |

| Dimensions | | | | | | | |
|---------------|-------|--------|-------|-------|---------|-------|-------|
| Ampere Rating | Poles | NEMA 1 | | | NEMA 3R | | |
| | | Height | Width | Depth | Height | Width | Depth |
| 40 - 225 | 2, 3 | 24 | 18 | 10 | 24 | 18.5 | 10.5 |
| | 4 | | | | | | |
| 300 - 400 | 2, 3 | 46 | 24 | 14 | 46 | 24 | 15 |
| | 4 | | | | | | |

UL 1008 Withstand and Closing Ratings

Please refer to GE Zenith Controls Bulletin TB-1102.

| A | B | Voltage | Phase | Config. | Hz |
|---|---|---------|-------|---------|----|
| 1 | 0 | 120 | 1 | 2 wire | 60 |
| 2 | 0 | 120/240 | 1 | 3 wire | 60 |
| 2 | 1 | 120/208 | 3 | 3 wire | 60 |
| 3 | 0 | 240 | 3 | 3 wire | 60 |
| 3 | 1 | 208 | 3 | 3 wire | 60 |
| 3 | 2 | 220 | 3 | 3 wire | 50 |
| 3 | 3 | 120/240 | 3 | 4 wire | 50 |
| 3 | 4 | 110/220 | 3 | 4 wire | 60 |
| 3 | 5 | 139/240 | 3 | 4 wire | 60 |
| 3 | 8 | 120/240 | 3 | 4 wire | 60 |
| 4 | 0 | 120/208 | 3 | 4 wire | 60 |
| 4 | 1 | 127/220 | 3 | 4 wire | 60 |
| 4 | 2 | 127/220 | 3 | 4 wire | 50 |
| 5 | 0 | 480 | 3 | 3 wire | 60 |
| 5 | 1 | 440 | 3 | 3 wire | 60 |
| 5 | 2 | 440 | 3 | 3 wire | 50 |
| 5 | 5 | 460 | 1 | 3 wire | 50 |
| 5 | 7 | 480 | 1 | 2 wire | 60 |
| 5 | 8 | 254/440 | 3 | 4 wire | 60 |
| 7 | 0 | 277/480 | 3 | 4 wire | 60 |
| 7 | 1 | 277 | 1 | 2 wire | 60 |
| 7 | 4 | 266/460 | 3 | 4 wire | 60 |
| 7 | 5 | 460 | 3 | 3 wire | 60 |
| 8 | 2 | 380 | 1 | 2 wire | 50 |
| 9 | 0 | 240/416 | 3 | 4 wire | 60 |
| 9 | 1 | 220/380 | 3 | 4 wire | 60 |
| 9 | 2 | 220/380 | 3 | 4 wire | 50 |
| 9 | 3 | 240/416 | 3 | 4 wire | 50 |
| 9 | 7 | 380 | 3 | 3 wire | 60 |

Note: Operating voltage must be specified at time of order. Only the most common voltages are shown above.



GeneratorJoe

4016 Quartz Drive
 Santa Rosa, CA 95405
 Phone: 707 539-9003
 Fax: 707 539-5212
 Email: sales@generatorjoe.NET
 Web www.generatorjoe.NET